# beurer wellbeing

LR 401

## LR 401 App-controlled air purifier





Convenient control and monitoring of ambient air both at home and on the go via the "beurer FreshHome" app







Air cleaning through a three layer filter system (prefilter + HEPA H13 filter\* + activated carbon)





For rooms of up to approx. 69 m<sup>2</sup> 1)














Function principle of the air purifier: Domestic dust, animal hairs, smells, pollen, harmful gases and various bacteria and viruses are filtered out of the air using a triple-layer filter system.

#### With fabric cover

Colour ambient air quality indicator

Additional cleaning using a selectable ultraviolet light

Smart sensor - detects fine particulate dust of up to  $2.5~\mu m$ 

4 fan levels + turbo mode

With smart automatic function: Control adjusted to the current ambient air

Timer function

With night mode: super silent operation and operating panel switched off

CADR: approx. 266 m<sup>3</sup>/h

For rooms of up to 69 m<sup>2</sup> 1)

Replacement filter with filter change indicator

Replacement filter: 693.09 (Running time of the filter approx. 4320 hours)

220-240V AC, 50-60 Hz, 50 W

Product measurements: Height: 50.5 cm, diameter: 21.5 cm

Product weight: approx. 3.7 kg

Volume: Night mode / Level 1: < 30 dB, Level 2: approx. 34 dB, Level 3: approx. 42 dB, Level 4 / Turbo mode: approx. 52 dB

3 year guarantee

Sales unit: 1 / Shipping carton: -

4211125 68013 8 EAN no.:

Item no.: 680.13



With fabric co




LR 401

beurer wellbeing

#### Tests show:

Three-layered filter system with HEPA H13 filter filters out at least 95% of particles with a size of 0.02 µm (viruses are generally 0.02-0.3  $\mu$ m<sup>2</sup>). For particles  $\geq$  0.3  $\mu$ m in size, the filter performance is even up to 99.95%.

In addition to room size, the purifying speed also plays a decisive role when selecting an air purifier. The clean air delivery rate (CADR) shows you at a glance how many cubic metres of air are purified in one hour. The higher the CADR value, the more efficient the air purifier.

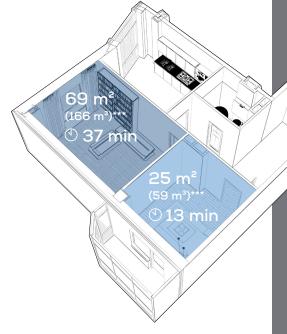



#### Smart sensor – recognises particles up to 2.5 µm in size

- The value PM 2.5 stands for floating fine particles with a diameter up to 2.5 micrometers (hair has a diameter of 70 micrometers).
- Our air purifiers remove fine particles and care for clean air.






#### Say goodbye to poor air quality with "beurer FreshHome" app

- Convenient control of LR 401
- Monitoring of ambient air at home
- Creation of individual air cleaning plans
- Detailed statistics of indoor air
- Useful tips to improve the indoor environment

### CONNECTION

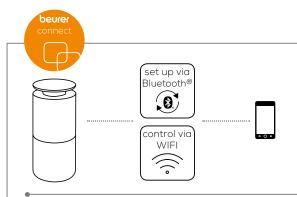

Innovative and comfortable control via smartphone. Easy setup via *Bluetooth®*, control via WIFI. Full use only with "beurer FreshHome" app.

beurer



System requirements:

• iOS ≥ 14.0 Android™ ≥ 8.0 • Bluetooth® ≥ 4.0



List of supported devices

\*\*\*With a ceiling height of 2.4 m

2) For comparison: According to the German Federal Centre for Health Education, viruses are generally 0.02-0.3 µm in size (https://www.infektionsschutz.de/infektionskrankheiten/erregerarten/viren.html).

and changes

DS\_EN\_BEU

0.20

680.13\_LR401\_2022-09-23.