



LV 50
Fresh Breeze

beurer
wellbeing

LV 50 Fresh Breeze Personal Air Fan and Cooler

 **german
engineering**



air cooling
technology

Air cooling and humidification using a fan and evaporation principle




3 stage
blower setting

With 3 performance levels



easy
to use

Easy operation via sensor buttons

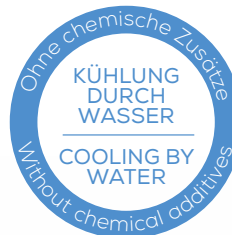

Handy fan with modern design

Compact and portable - ideal for your workplace

Water bottle as removable water tank

Cools for up to 4 hours (operation at highest level)

Visible water level in bottle

Hygienic thanks to exchangeable bottle and exchangeable evaporation filter

Can also be used as a fan without a water bottle

Easy to clean

With practical carrying handle

Incl. 1 water bottle 0,25 l (replacement bottle: 684.03)

Incl. 1 evaporation filter (2 x replacement filter: 684.02)

Incl. micro USB cable

Input: 5 V DC, 0,5 A

Product measurements (WDH): approx. 14.0 x 14.0 x 11.7 cm

Product weight: approx. 460 g (incl. micro USB cable)

3 year guarantee

Sales unit: 4 / Shipping carton: -

EAN no.: 4211125684013


Item no.: 684.01



684.01_LV50_Fresh_Breeze_2020-12-17_02_DS_EN_BEU Subject to errors and changes



How does the evaporation principle work?

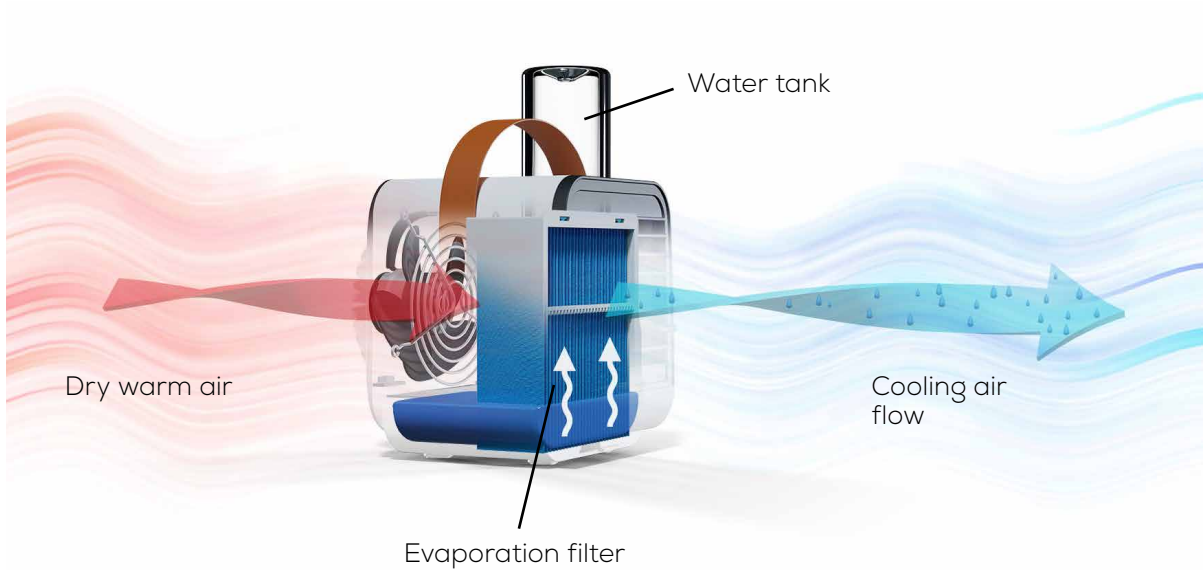

The air fan draws in the dry warm air from the room, which then comes into contact with the evaporation filter, which is saturated with water. The contact between the air flow and the damp filter surface causes the water to evaporate. The ambient air absorbs the humidity, and the thermal energy required for the evaporation process is extracted from the ambient air. There is a noticeable drop in the temperature of the ambient air.